#### **CAPACITY INVOICE FILE**

## NTS EXIT CAPACITY INVOICE FILE (.IDC)

#### AI\_O\_EXIT\_CAPACITY\_INVOICE\_FILE

#### Contains 10 different record types:

<u>Level</u>	Record Name	<u>Occurences</u>	<b>Optionality</b>
<u>1</u>	HD_A00_STANDARD_HEADER	<u>1</u>	$\underline{\mathbf{M}}$
<u>1</u>	RT_D00_UKL_INVOICE	<u>1</u>	<u>M</u>
<u>1</u>	RT_D01_STANDARD_CLAUSE	<u>up to 99</u>	<u>M</u>
<u>1</u>	RT_D02_INVOICE_ITEM_SUMMARY	<u>3</u>	<u>M</u>
<u>1</u>	RT_D04_CAPACITY_RECORD	up to 4681	<u>O</u>
<u>1</u>	RT_D05_OVERRUN_RECORD	<u>up to 84</u>	<u>O</u>
<u>1</u>	RT D06 FLEX OVERRUN CHG		<u><del>Q</del></u>
<u>1</u>	HD RT R01 REMITTANCE ADVICE	<u>1</u>	<u>O</u>
	<u>DETAIL</u>		
<u>1</u>	RT_R02_REMITTANCE_ADVICE_ITEM	<u>3</u>	<u>O</u>
<u>1</u>	RT_V01_VAT_TOTAL	<u>10</u>	<u>M</u>
<u>1</u>	TR Z99 STANDARD TRAILER	<u>1</u>	<u>M</u>

Note 1 OPT – Optional, Mandatory, DOM – Domain i.e. Text, Numeric, Date, MTimestamp

DEC – Number of decimal places

## NTS\_EXIT-CAPACITY\_INVOICE\_FILE

#### HD\_A00\_STANDARD\_HEADER

(DEF: UK Link standard header for all files sent between Transco and another organisation. Frequency: 1 per file)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	DESCRIPTION
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: A00
ORGANISATION_ID	M	N	10	0	A reference whichthat uniquely identifies a User/organisation. customer/organisation. This is your Business Associate number as stored on AT Link.
FILE_TYPE	M	T	3	0	An application specific code used to identify the structure and the usage of the file.  VALUE: IDC
CREATION_DATE	M	D	8	0	The date on which the file was generated. Format: YYYYMMDD
CREATION_TIME	M	M	6	0	The time at which the file was generated ————————————————————————————————————
GENERATION_NUMBER	M	N	6	0	This field is used to uniquely identify the file. For this file the field will contain the invoice number.

-----

\* 36

# RT\_A00\_ATL\_INVOICE RT\_D00\_UKL\_INVOICE

(DEF: The Invoice record for AT Link. Frequency: 1 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	<u>DESCRIPTION</u>
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains.  VALUE: A00D00
BA_ABBR	M	Т	12	0	Abbreviation of your Business AssociateUser name.
INVOICE_TP INVOICE TYPE	_M	Т	3	0	A code that indicates the invoice type. In this instance the invoice type is CAP –  NTS Exit Capacity.
INVOICE_NUMBER	M	N	6	0	The unique reference allocated to an invoice.
INVOICE_CREATION_DT INVOICE CREATION DATE	M	D	8	0	Date on which this invoice was created. Format: YYYYMMDD
TAX_POINT_DATE	M	D	8	0	The date from which the invoice can betaxed. This will be the date that the invoice was first sent to the Business—Associate. The Tax Point Date. Format:  YYYYMMDD

-----

\* 40

## RT\_D01\_STANDARD\_CLAUSE

(DEF: Standard clause information for the invoice. Frequency: Max. 99 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	DESCRIPTION
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: D01
SEQUENCE_NUMBER	M	N	2	0	Line number of standard clause. VALUE: 01 to 99
STANDARD_CLAUSE	M	T	60	0	Standard text that is contained onin the invoice.
		*	65		

IDC File(Section 13 SID)

#### RT\_D02\_INVOICE\_ITEM\_SUMMARY

(DEF: Invoice item details for the Capacity Invoice. Frequency: 6 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	DESCRIPTION
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: D02
BA_ABBR	M	T	12	0	Abbreviation of your Business Associate User name.
INVOICE_NUMBER	M	N	6	0	The unique reference allocated to an invoice.
CHARGE_TYPE_CODE	M	Т	3	0	A code to identify the type of charge for the invoice item. This will be Values: either:  'NEC NTS Entry Capacity
					'NDS' NTS DM Exit Capacity 'NNX` NTS NDM Exit Capacity 'EOR' Entry Overrun
					'EFO' Entry Flexibility Overrun
					'EXO' Entry Exit Overrun
NET_AMOUNT	M	N	<del>13</del> 12	2	The total amount due for the invoice item net of VAT (£). The first character VAT. is signed +.
VAT PERCENTAGE	— M	N	6	4	The percentage of the total amount due-
					used to calculate the VAT amount.
VAT PERCENTAGE	M	N	4	2	The applicable VAT rate.
VAT_AMOUNT	M	N	<del>11</del> 12	2	The amount of the VAT due for the invoice item (£). The first character is item.  signed +.
TOTAL_AMOUNT	M	N	<del>13</del> 12	2	The total amount of the invoice item Including VAT. (£). The first character is signed +.
BILLING_PERIOD _BEGIN_DATE	M	D	8	0	The first date in the billing period from for which the invoice has been calculated. Format: YYYYMMDD
BILLING_PERIOD _END_DATE	M	D	8	0	The last date in the billing period onfor which the invoice has been calculated. Format: YYYYMMDD
VAT_REG_NBR	<u>M</u> O	T T	12 20	0	Your User's VAT number. This will only be used for self billed invoice items. For everything else it will be null.
					used for self billed items so for the Storage Invoice this will always be set
IDC Eila(Castion 12 CID)		D	age 5 of	1616	Version 42 For Representation
IDC File(Section 13-SID)		r	age J OI	1010	Issued: 20.05.2005

ersion 42 For Representation

<u>Issued: 20.05.2005</u>

<u>Implementation: 18.10.2005</u>

to spaces.

\* 95<u>100</u>

#### RT\_D04\_CAPACITY\_RECORD

(DEF: Supporting Entry and Exit Capacity Charge Item records. Frequency: NTS Entry Capacity 'NEC' Max. 496 per file. 6 Terminals + 3 Onshore fields + 7 Storage Physical Injection Points = 16 records/day \* 31 days = 496 -records/month.

DM Exit Capacity 'NDX' Max. 1116 per file. NDM Exit Capacity 'NNX' Max. 1116 per file. 36 exit zones = 36 records/day \* 31 days = 1116 records/month.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	DESCRIPTION
TRANSACTION_TYPE	M	Т	3	0	A code identifying the type of information that this record contains. VALUE: D04
INVOICE_NUMBER	M	N	6	0	The unique reference allocated to an invoice.
CHARGE_TYPE_CODE	M	Т	3	0	A code to identify the type of charge.  This will be either:  'NEC' NTS Entry Capacity  'NDX' NTS DM Exit CapacityVALUES::
					'NDX' 'NNX' NTS NDM Exit Capacity
CHARGE_TYPE_DESC CHARGE TYPE DESCRIPTION	M N M	T T	<del>-30</del> <u>50</u>	0	The detailed description of the charge.
CONTR_ID SERVICE ID	M M	T T	<u>12</u> <u>15</u>	0	A unique reference identifying one of your services.
RATE_SCHEDULE_CODE	M	Т	7	0	A text code classifying the type of transportation or storage service offered by Transco.the Gas Transporter.
PRODUCTION_DATE	_ <del>M</del>	Đ	8	0	— M D 8 0 The date to which the charge relates. Format: YYYYMMDD
BILLING_ZONE	M	T	3	0	The particular <del>entry or</del> exit zone for this charge.
BILLABLE_QT	M	N	14	0	Quantity of gas
BILLABLE_QUANTITY	M	N	14	0	Quantity of gas (in kwh) that forms the basis of the charge. The first character is signed."  either + or
PRICE	M	N	7	4	The annual rate (in pence) used to calculate this charge. The first characteris signed +.
CHARGES_DUE	M	N	<del>11</del> <u>12</u>	2	The total value of the charge that will be included on the invoice (pounds, pence).  The first character is signed +.
TIER_NBR					
IDC File(Section 13 SID)		P	age 7 of	<u>16</u> 16	Version 42 For Representation <u>Issued: 20.05.2005</u>
© <del>2000</del> <u>2005</u> Transco plc					Implementation: 18.10.2005

Splits the charge up into different rate bands. Tier Nbr identifies which rate TIER NUMBER T 2 0 M band has been used.

\* <del>106</del>130

#### RT\_D05\_OVERRUN

(DEF: Supporting Entry and Exit Overrun Charge Item records. Frequency: Entry Overrun - EOR - Max. 16 per file.

6 Terminals + 3 Onshore Fields + 7 Storage Physical Injection Points = 16 records/day. Only the greatest overrun for each entry point in that month will be charged so the maximum number of Entry Overrun records that there can be for any month is 16 records/month.

Exit Overrun 'EXO' - Max. 36 per file.

36 exit zones = 36 records/day. Only the greatest overrun record for each exit point in that month will be charged so the maximum number of exit overrun records that there can be for any month is 36 records/month.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	<u>DESCRIPTION</u>
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: D05
INVOICE_NUMBER	M	N	6	0	The unique reference allocated to an invoice.
CHARGE_TYPE_CODE	M	Т	3	0	A code to identify the type of charge.  This will be either:  EOR' Entry Overrun VALUE: 'EXO' Exit
Overrun					<u>'EOR' Entry Overrun VALUE:</u> 'EXO' Exit
CHARGE_TYPE_DESC CHARGE TYPE DESCRIPTION	M M	T T	<del>30</del> <u>50</u>	0	The detailed description of the charge.
CONTR_ID SERVICE ID	M M	T T	12 15	0	A unique reference identifying one of
RATE_SCHEDULE_CODE	M	T	7	0	your services.  A text code classifying the type of transportation <del>or storage</del> service offered by Transco.the Gas Transporter.
PRODUCTION_DATE	M	D	8	0	The date to which the charge relates. Format: YYYYMMDD
BILLING_ZONE	M	Т	3	0	The particular entry or exit zone for this charge.
ZONE_NET_CAPACITY	M	N	14	0	The total capacity of the billing zone (in kwh).  The first character is signed +.
FLEX_OVERRUN	M	N	14	0	This is the amount of capacity exceeded due to a flexibility occurrence. The first
ALLOCATED_SUM					<del>- character is signed +.</del>
_QUANTITY	M	N	14	0	The quantity of gas that is allocated to The Exit zone (in kwh).  the entry zone. The first character is signed either + or
BILLABLE_QUANTITY	M	N	14	0	Quantity of gas that forms the basis of the charge. The first character is signed—+.

Page 9 of 1616

Version 42 For Representation

<u>Issued: 20.05.2005</u>

<u>Implementation: 18.10.2005</u>

PREVIOUS MONTH QUANTITYO	N	14	0	The overrun quantity (in kwh) of the current
				month that is less than or equal to the overrun quantity of the previous month. This is only applicable for December to March inclusive.
PREVIOUS_MONTH_MULTIPLIER	RO N	4	2	The multiplication factor for calculating the charge amount for the previous month quantity. This is only applicable for December to March
PREVIOUS MONTH CHARGE O	N	12	2	inclusive.  The overrun charge amount (pounds,pence) for
PREVIOUS MONTH_CHARGE O	IN	12		previous month quantity. This is only applicable for December to March inclusive.
CURRENT MONTH QUANTITY M	I N	14	0	The overrun quantity (in kwh). For December to March inclusive, this amount will be the remaining quantity that is in excess of the previous month quantity.
CURRENT MONTH MULTIPLIER	M N	4	2	The multiplication factor for calculating the charge amount for the current month.
CURRENT MONTH CHARGE M	I N	12	2	The overrun charge amount (pounds, pence) for current month quantity.
TOTAL BILLABLE QUANTITYM	I N	14	0	Sum of previous month and current month  Quantity of gas (in kwh) that forms the basis of the charge.
PRICE M	I N	7	4	The annual rate (in pence) used to calculate this charge. The first character is signed +.
CHARGES_DUE M	I N	<del>11</del> 12	2	The sum of current month and previous month Charge Amounts. The total amount of the charge that is included on the invoice (pounds, pence).
TIER_NBR M	Т	2	0	The first character is signed +.  Splits the charge up into different rate bands. Tier Nbr identifies which rate band has been used.
		* 148 <u>218</u>		

#### RT\_D06\_FLEX\_OVERRUN\_CHG

(DEF: Flexibility Overrun Charge record. Frequency: Max. 93 per file. This is estimated at 3 flex bids per day by AT-Link which multiplied by 31 days gives 93 records/month.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	— DESCRIPTION
TRANSACTION_TYPE	M	T	3	0	—A code identifying the type of— information that this record contains— VALUE: D06
INVOICE_NUMBER	M	N	6	0	— The unique reference allocated to an— invoice.
CHARGE_TYPE_CODE	<u> </u>		3	0	A code to identify the type of charge. VALUE: EFO
CHARGE_TYPE _DESCRIPTION	M	T	30	0	The detailed description of the charge.
CONTR_ID	M	_T	12	0	A unique reference identifying one of your services.
RATE_SCHEDULE _CODE	M	T	7	0	— A text code classifying the type of— transportation or storage service offered— by Transco.
PRODUCTION_DATE	M	<del>D</del>	8	0	The date to which the charge relates.
BILLING_ZONE	M	T	3	0	The particular entry or exit zone for this charge.
ZONE_NET_CAPACITY	M	N	14	0	The total capacity for the entry zone.  The first character is signed +.
ACCEPT_FLEX _QUANTITY	<u> </u>	N		0	The accepted flex quantity from the shippers. The first character is signed—either + or .
NORMAL_OVERRUN _QUANTITY	M	N	_14	0	The capacity overrun that occurs without the flexibility bids. The first character is signed +.
ALLOCATED_SUM QUANTITY	M	N	14	0	The quantity of gas that is allocated to the entry zone. The first character is signed +.
BILLABLE_QUANTITY	M	N	14	0	Quantity of gas that forms the basis of the charge. The first character is signed +.
PRICE	M	N	7	4	The annual rate (in pence) used to- calculate this charge. The first character— is signed +.

CHARGES_DUE	<del>M</del>	N	11		The total amount of the charge that is
<del></del>					included on the invoice (pounds, pence).
					The first character is signed +.
TIER_NBR	M	T	2	0	Splits the charge up into different rate-
. <del> </del>					bands. Tier Nbr identifies which rate
					band has been used.
			* 162		

IDC File(Section 13-SID)

## HD\_RT\_R01\_REMITTANCE\_ADVICE\_DETAIL

(DEF: The detail record for the remittance advice. Frequency: 1 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	<u>DESCRIPTION</u>
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: R01
BA_NBR	M	N	10	0	A unique AT-Link reference number for yourthe Business Associate User.
INVOICE_NUMBER	M	N	6	0	The unique reference allocated to an invoice.
PAYMENT_FORECAST _DATE	<u>MO</u>	T	8	0	Remittance Advice Forecast Date. This is the date that the User intends to transfer the monetary value, detailed on the remittance advice, to the Transco bank account. It shows the Users intention of the payment date for an invoice. Format: YYYYMMDDThe date the shipper intends to transfer the monetary value, detailed on the remittance advice.
TOTAL_AMOUNT_PAID	M	N	12	2	The total value of the settlement made to Transco with respect to an invoice.
			* 39		

## RT\_R02\_REMITTANCE\_ADVICE\_ITEM

(DEF: The item information attached to the remittance advice sent to/from shippers. Frequency: 6 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	DESCRIPTION
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: R02
INVOICE_ITEM_REF _NUMBER	M	N	3	0	The invoice item reference number used by Invoicing '95. This relates one to one with the charge type code.
CHARGE_TYPE_CODE	M	T	3	0	A code to identify the type of charge.
TOTAL_AMOUNT_DUE _FOR_CHARGE	M	N	12	2	The sum of the invoice item amount plus VAT for the charge type. Holds the sum of the invoice line amount plus the VAT applied to that line amount.
AMOUNT_PAID	M	N	12	2	The total amount paid against this item to date for the charge type including VAT.
PAYMENT_REASON _DESCRIPTION	<u>MO</u>	T	200	0	This contains the reason for partial payment or non-payment of this invoice item. To include details of invoice number, invoice item number and charge item number that is being queried.

\* 233

## $RT\_V01\_VAT\_TOTAL$

(DEF: Summary of VAT information for this invoice. Required by customs and excise. Frequency: approximately 10 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	<u>DESCRIPTION</u>
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains.  VALUE: \( \frac{\forall 02\to 01}{\columbfa} \)
VAT_CODE	M	Т	3	0	A code-to identifying the type of VAT being used.
VAT_PERCENTAGE	M	N	<u>64</u>	4 <u>2</u>	The percentage used to calculate the VAT amount The percentage used to calculate the VAT amount.
TOTAL_VAT_AMOUNT.	M	N	<del>13</del> 12	2	The total amount of the VAT due per VAT  Code for the-invoice. Unit: pounds (£). The first character is signed - if it is a credit to the User either + or

\* <del>25</del>22

#### TR\_Z99\_STANDARD\_TRAILER

(DEF: UK Link standard trailer for all files sent between Transco and other organisations. Frequency: 1 per file.)

RECORD/FIELD NAME	<u>OPT</u>	<u>DOM</u>	<u>LNG</u>	<u>DEC</u>	<u>DESCRIPTION</u>		
TRANSACTION_TYPE	M	T	3	0	A code identifying the type of information that this record contains. VALUE: Z99		
RECORD_COUNT	M	N	10	0	The number of detail records contained within the file. This should not include the standard header and standard trailer but should include any file specific trailers if specified for this file.		
			* 13				
			** <del>962</del> 908				